



Mousetrapper®

Mousetrapper Flexible

START

To start using your Mousetrapper Flexible right away, connect the enclosed cable to the Mousetrapper Flexible, and then to one of the USB ports on your PC.



BATTERY

After about eight hours, the battery will be fully charged and you can disconnect the cable. The battery is rechargeable and with normal use will be in need of recharging for approximately three months.

CORDLESS USE

The USB receiver for cordless use is located in a compartment on the bottom side of the unit. Connect the USB receiver to one of the USB ports on your PC. Press the start button until the battery symbol displays a green light (for approximately 5 seconds). Your Mousetrapper is now installed and ready for use.

FUNCTIONS

Mousetrapper Flexible is supplied with a number of pre-set functions, described below: By using the software MT Keys, you can easily select functions for the nine buttons. The software can be downloaded from www.mousetrapper.com.

AUTOMATIC SWITCH-OFF

When the USB receiver is disconnected from the USB port of the PC, your Mousetrapper Flexible will switch off automatically. To restart the unit, reconnect the USB receiver and press the on/off button for 5 seconds.

CHARGING

When the battery lamp flashes red, the battery needs recharging. Use the enclosed cable as before. When the battery symbol displays a steady green light the battery is fully charged.